

November 14, 2023

AFD
810 7th Avenue
2nd Floor
New York, NY 10019
Attn: Ms. Joanne Miller

Re: Brookhaven Hospital Mobile Records System
Relocation
Ref# 2306-027

Dear Joanne:

We received the original deck and rail drawings from the manufacturer of the Mobile Filing System this past week. We sent our men back to the Brooklyn Hospital with these drawings to verify this information and report back to us with any discrepancies. They found none. The original installation was performed exactly as per the attached plan drawings provided.

For instance: The 1st rail, off the back wall is exactly 22" to the center line of that first rail. The 2nd rail is 54" to the center line, from the first rail. The 3rd rail is 126", from the first rail, and the 4th rail is 180" from the 1st rail. (Please see drawings P1, P4, P7 and P10, specifically).

The original layout is basically two (2) systems with their access handles facing each other, that luckily were designed at the same depth (see rail dimensions and mobile carriage depth dimensions on drawings P-1, P-2, P-4, P5, P7, P8, P10 and P-11, specifically).

This works perfectly with the ability for Zyscovich to use both systems in tandem, or all together, as one larger system, as shown in the bottom half on the preliminary new layout drawings attached.

Therefore, Zyscovich should use this rail location information in planning their reinforcement of the third floor relocation. In addition, there is a new small Mobile System above the one being relocated as discussed, with four (4) Mobile Carriages, running perpendicular to the larger system. Without being able to field measure the space and using the new layout drawing provided only, it appears that they can use this same information in planning the reinforcement for the floor, for that system as well. (It will require 4 new carriages, made exactly as the original project).

Please let us know if you need any further information regarding this records room relocation and when we may be able to access the 3rd floor for final field dimension verification.


THE LUCIA GROUP
45 West Jeffry Blvd, Suite 108
Deer Park, NY 11729
631-392-4900 phone
631-392-4903 fax

www.theluciagroup.com



One final note: the existing system height, from the subrail secured to the floor, to the very top of the steel shelving mounted on the Mobile Carriages is 84". (see typical elevation drawing attached). The architect should plan accordingly for the proper clearance from the top of these Mobile Shelving System to the sprinkler head above.

Sincerely,

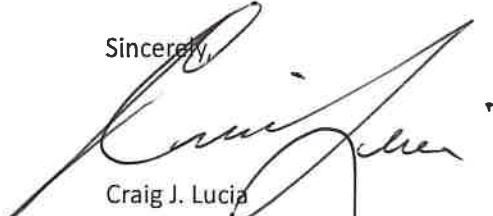


Craig J. Lucia
THE LUCIA GROUP INC.

THE LUCIA GROUP

45 West Jefryn Blvd, Suite 108
Deer Park, NY 11729
631-392-4900 *phone*
631-392-4903 *fax*

www.theluciagroup.com

EXISTING

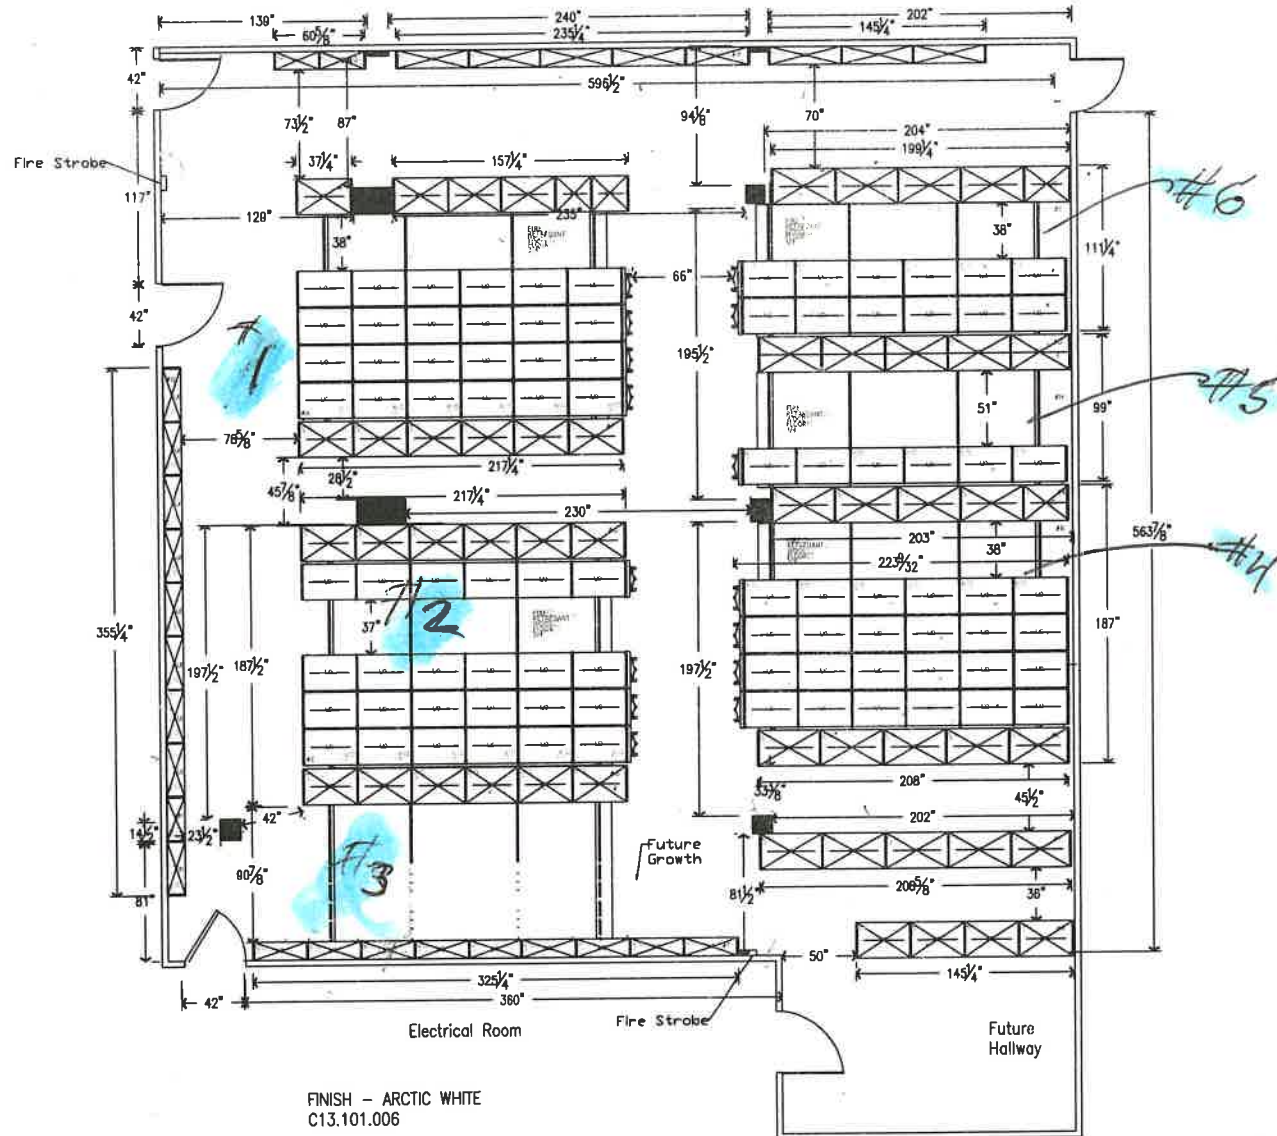

COMBAT
LABORATORY
BASEMENT

EXPANSION
IN
BASEMENT



THE LUCIA GROUP
45 Jefryn Blvd, Suite 108
Deer Park, NY 11729
631 239 5564 phone 646 998 1319 fax
theluciagroup.com

Brooklyn Hospital

REF#: 013182 DATE: May 22, 2020 DRAWN BY: I. Jimenez


This drawing and information contained herein is proprietary, confidential and is intended only for the individual or entity named in the correspondence. The disclosing, copying, or distributing of this drawing and/or accompanying proposal is strictly prohibited. If you are not the intended recipient of this document, please contact THE LUCIA GROUP, inc. @ 212-767-0111.

SCALE: 3/32" = 1' 0"

DATE	DESCRIPTION
03/09/20	Prelimin. Drawings
03/19/20	Revised
04/27/20	Revised
05/22/20	Revised

SK.01

NEW
3RD FL

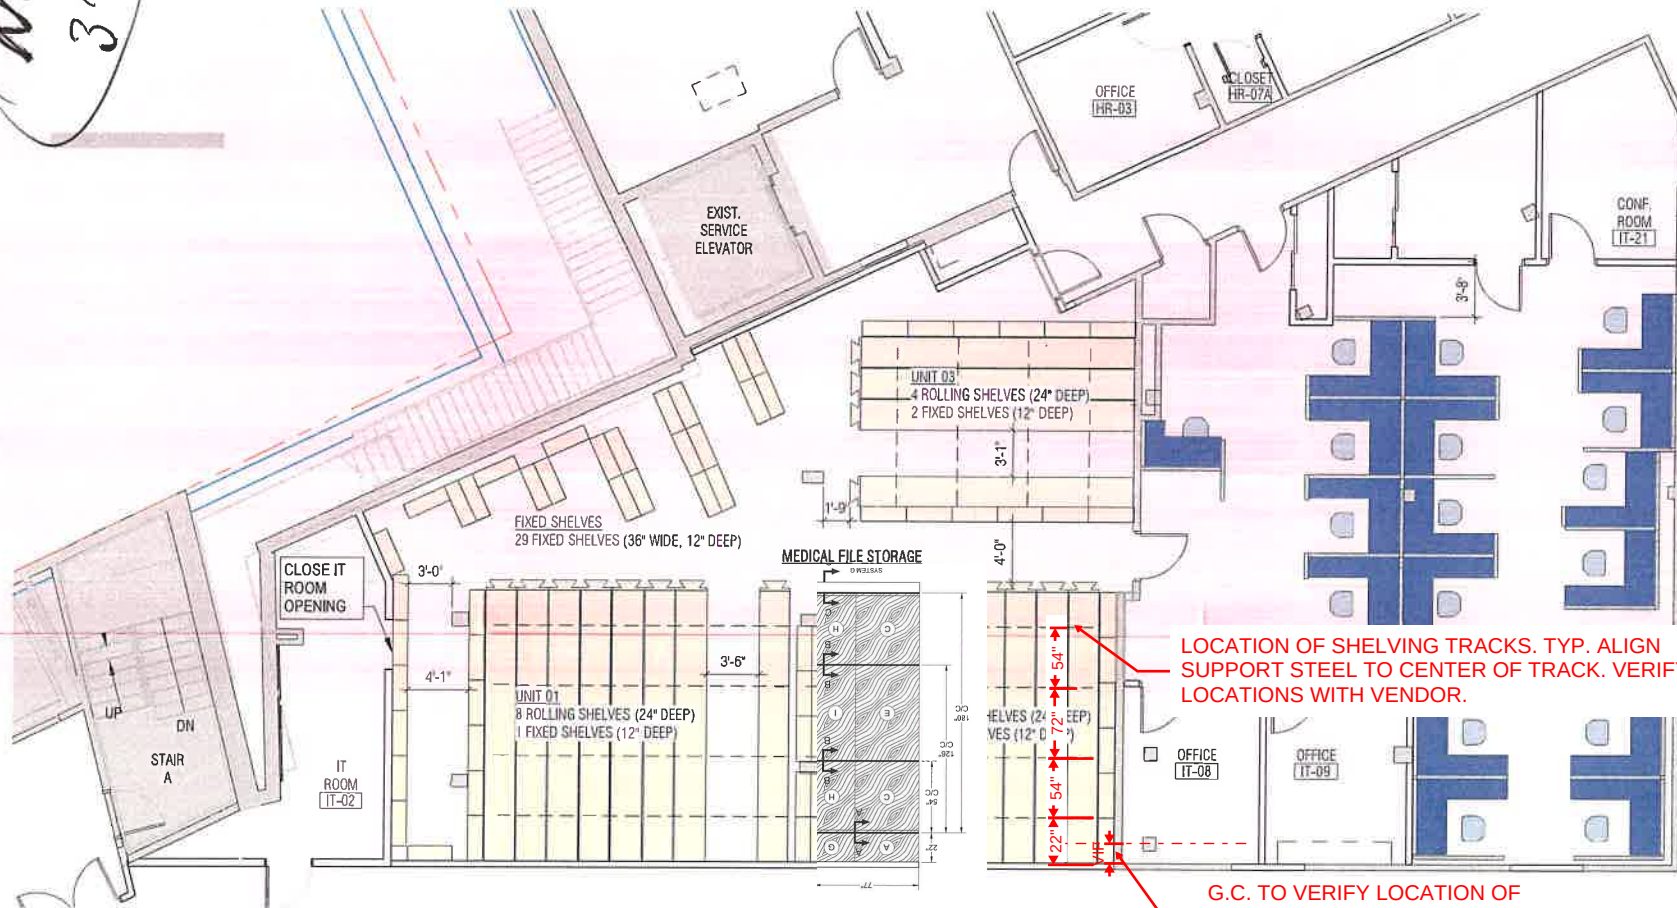

3RD FLOOR CONSTRUCTION PLAN

Scale: 1/8" = 1'-0"

LOCATION OF SHELVING TRACKS. TYP. ALIGN
SUPPORT STEEL TO CENTER OF TRACK. VERIFY
LOCATIONS WITH VENDOR.

G.C. TO VERIFY LOCATION OF
3RD FLOOR WALL RELATIVE
TO COLUMN LINE

No copies, transmissions, reproductions, or electronic reversions of any portions of these drawings in whole or in part, be made, without the express written permission of Zyscovich Architects. All designs indicated in these drawings are property of Zyscovich Architects. All copyrights reserved © 2020

Scale: 1/8" = 1'-0" Date: 10/11/22

1866NYFS 523 FULTON - LEASING

3RD FLOOR MEDICAL STORAGE LAYOUT

ZYSCOVICH
ARCHITECTS

270 Lafayette St., Suite 700
New York, New York 10012
1 212 343 0044 1 212 343 0048


Sheet Ref:

Proj. Ref:




SK-BHC-01

This drawing contains proprietary and confidential information. duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

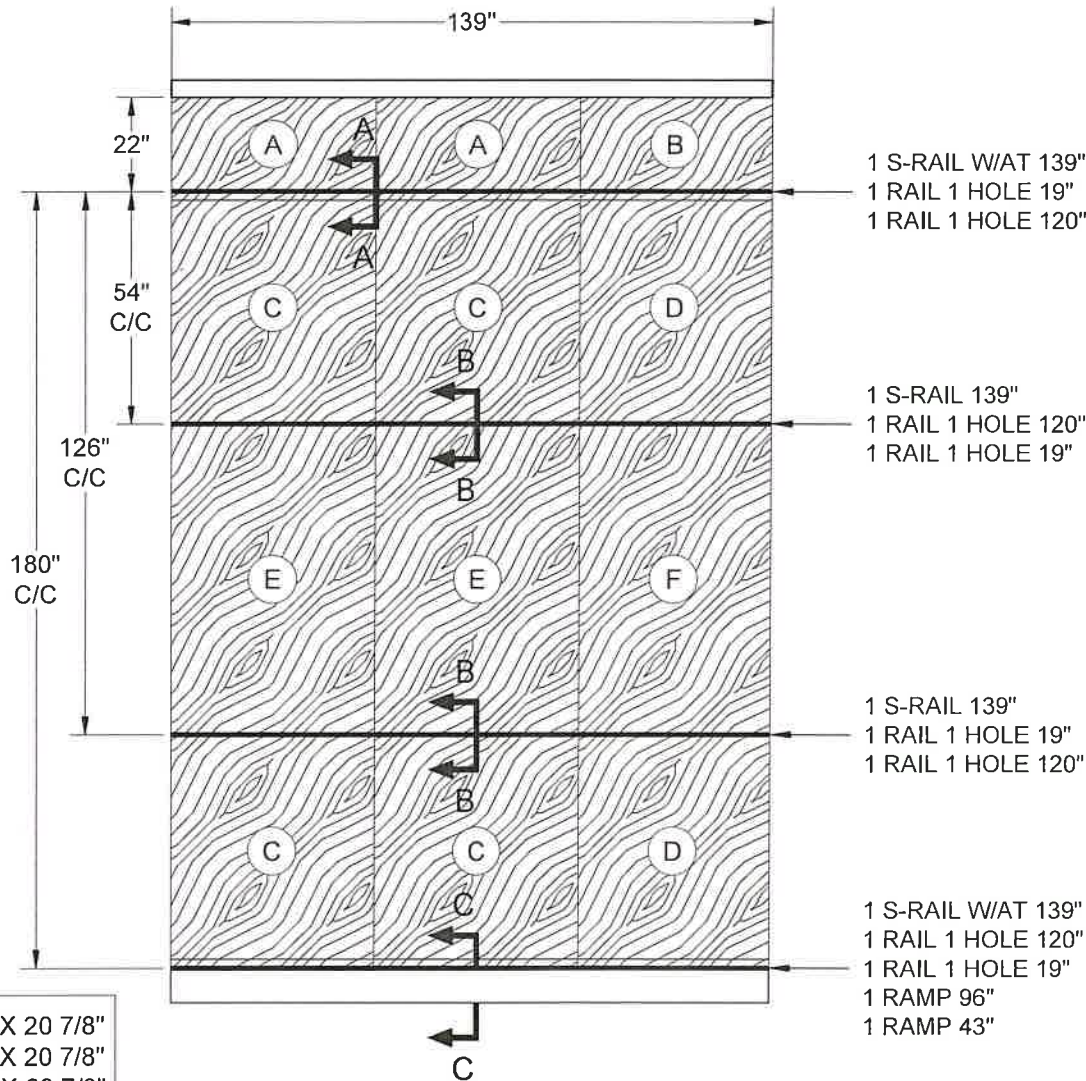

- 1 RAIL 1" X 3/4"
- 2 S-RAIL A/T
- 3 SHIM & GROUT
- 4 TAPCON SCREW 1/4" X 2 1/4"
- 5 TAPCON SCREW 1/4" X 1 1/4"
- 6 CONCRETE OR PLYWOOD
- 7 RAMP

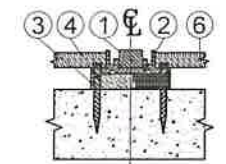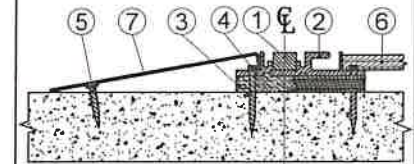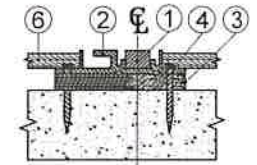

PLYWOOD TYPE "A" : 47 3/8" X 20 7/8"
PLYWOOD TYPE "B" : 44 1/4" X 20 7/8"
PLYWOOD TYPE "C" : 47 3/8" X 69 7/8"
PLYWOOD TYPE "D" : 44 1/4" X 69 7/8"
PLYWOOD TYPE "E" : 47 3/8" X 50 3/8"
PLYWOOD TYPE "F" : 44 1/4" X 50 3/8"

LAYOUT DE RAILS
BROOKLYN HOSPITAL
SYSTEMS A-E-K-L
RAILS LAYOUT

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INIT.
NO FICHER CAD / CAD FILE NAME 172806.01-12	VF - SEEN	VERIF. - CHECK	ÉCHELLE - SCALE
DATE : 2020-07-17			NTS
VISA MFOURNIER	PAGE : 1 DE 3		

TOLÉRANCE GÉNÉRALE ± 1/16"
MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace
WWW.MONTEL.COM


GENERAL TOLERANCING ± 1/16"
PROJECTION
1° ANGLE
3° ANGLE

172806.01-12

P1

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

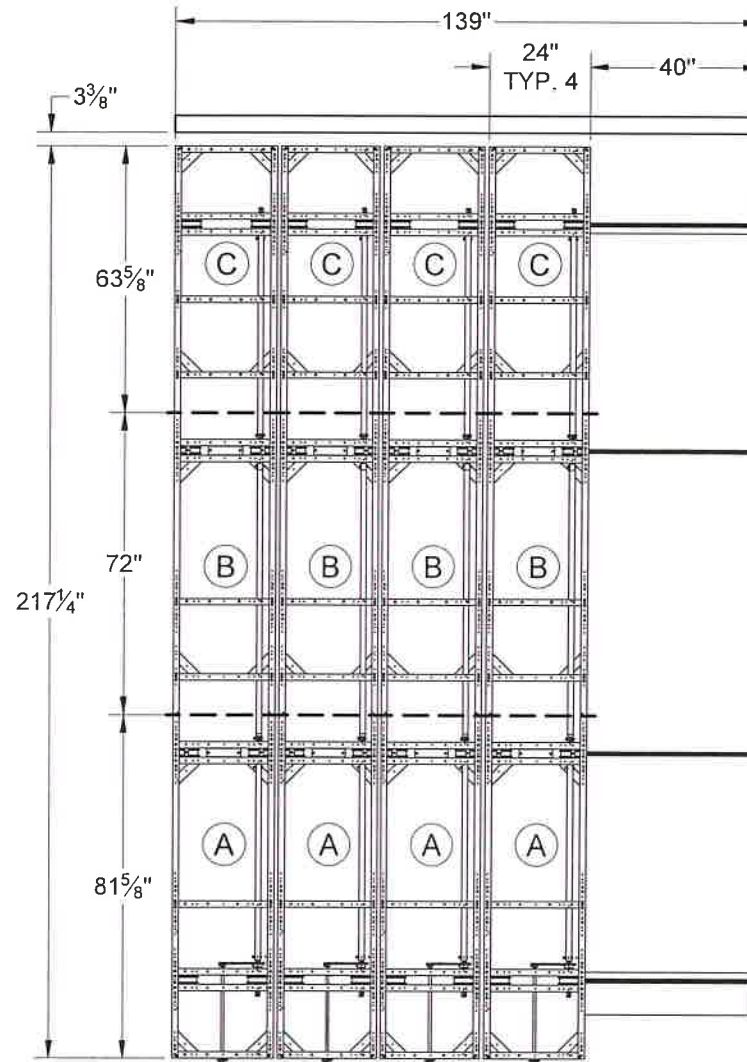

LEGEND:

- (A) MCSMES08163.240.01
- (B) MCSMEA07200.240.03
- (C) MCSMEE06363.240.01

CARRIAGES LAYOUT
BROOKLYN HOSPITAL
SYSTEMS A-E-K-L
LAYOUT DE CHARIOTS

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU		—	M.F.
ÉMISS.	MODIFICATION		DATE	INIT.
NO FICHER CAD - CAD FILE NAME	NO REFERENCE	VU - SEEN	ÉCHELLE - SCALE	
172806.01-.12		VERIF. - CHECK	NTS	
DATE : 2020-07-17			172806.01-.12	
VISA MFOURNIER	PAGE : 2 DE 3		P2	

TOLÉRANCE GÉNÉRALE ± 1/16"


GENERAL TOLERANCING ± 1/16"



MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

PROJECTION




1° ANGLE

3° ANGLE

This drawing contains proprietary and confidential information. Duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles. Toute reproduction ou utilisation de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

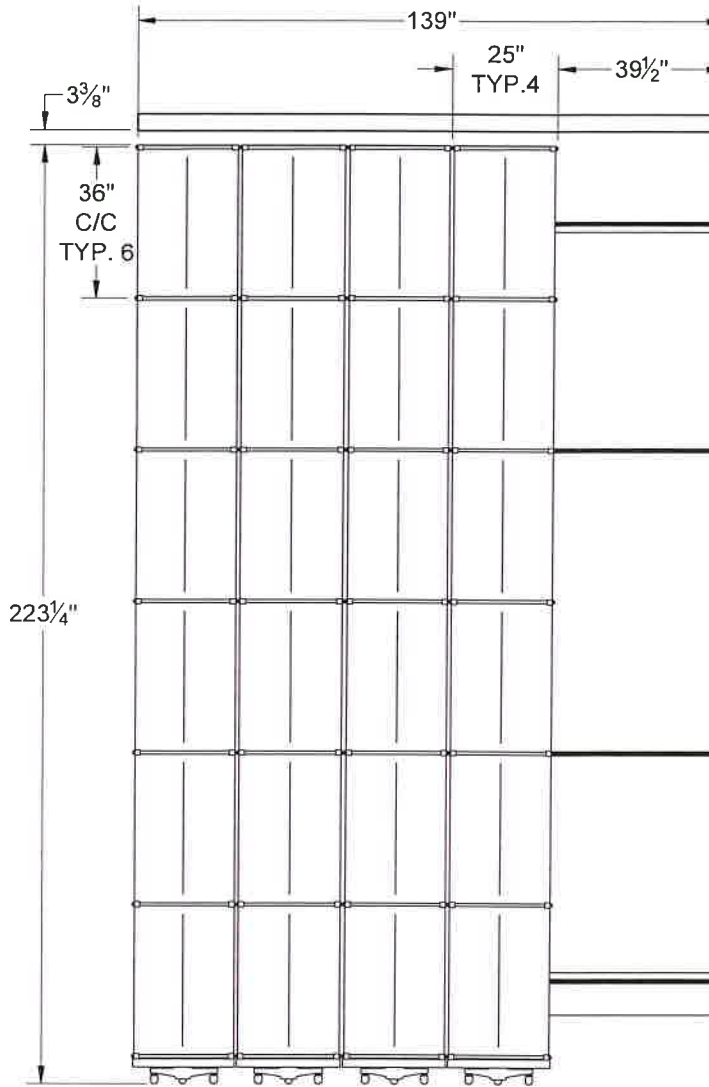

LEGEND

-  SINGLE FACE SHELVING FIXED ON FLOOR
-  FIXED SINGLE FACE SHELVING
-  FIXED DOUBLE FACE SHELVING
-  MOBILE SINGLE FACE SHELVING
-  MOBILE DOUBLE FACE SHELVING
-  DOUBLE FACE FULLBACK
-  SWAY BRACE
-  HANDLE (FOR MECHANICAL SYSTEM)

SHELVING LAYOUT BROOKLYN HOSPITAL SYSTEMS A-E-K-L LAYOUT D'ETAGERES

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE COMMANDE NOUS ENGAGENT POUR L'EXECUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU		---	M.F.
ÉMISS.	MODIFICATION		DATE	INIT.
NO FICHIER CAD - CAD FILE NAME	NO REFERENCE	VU - SEEN	VERIF. - CHECK	
172806.01-.12				
DATE : 2020-07-17				
VISA MFOURNIER	PAGE : 3 DE 3			

ECHELLE - SCALE

NTS

TOLÉRANCE GÉNÉRALE ± 1/16"


GENERAL TOLERANCING ± 1/16"



MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

PROJECTION



1°ANGLE


3°ANGLE

172806.01-.12




P3

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toute reproduction ou utilisation de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

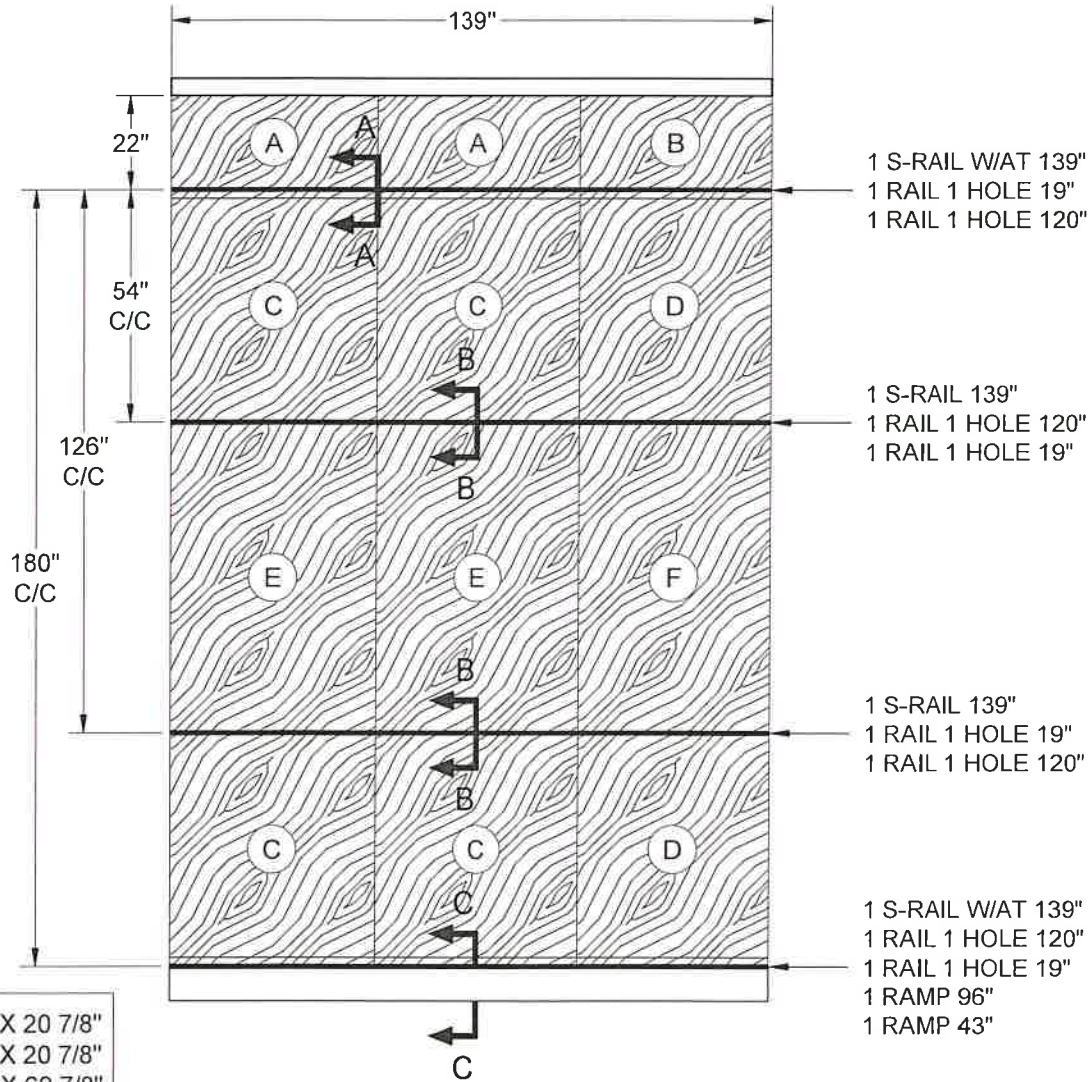

- 1 RAIL 1" X 3/4"
- 2 S-RAIL A/T
- 3 SHIM & GROUT
- 4 TAPCON SCREW 1/4" X 2 1/4"
- 5 TAPCON SCREW 1/4" X 1 1/4"
- 6 CONCRETE OR PLYWOOD
- 7 RAMP

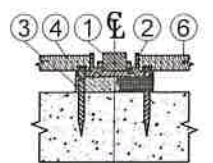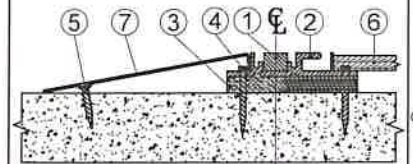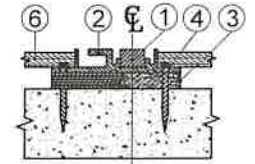

PLYWOOD TYPE "A" : 47 3/8" X 20 7/8"
PLYWOOD TYPE "B" : 44 1/4" X 20 7/8"
PLYWOOD TYPE "C" : 47 3/8" X 69 7/8"
PLYWOOD TYPE "D" : 44 1/4" X 69 7/8"
PLYWOOD TYPE "E" : 47 3/8" X 50 3/8"
PLYWOOD TYPE "F" : 44 1/4" X 50 3/8"

LAYOUT DE RAILS
BROOKLYN HOSPITAL
SYSTEMS B-J-P-R
RAILS LAYOUT

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INIT.

TOLÉRANCE GÉNÉRALE ± 1/16"

MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace
WWW.MONTEL.COM

GENERAL TOLERANCING ± 1/16"

PROJECTION

1° ANGLE 3° ANGLE


SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF ORDER ARE BINDING FOR THE EXECUTION.

NO FICHE CAD / CAD FILE NAME	NO REFERENCE	VU - SEEN	VERIF. - CHECK	ÉCHELLE - SCALE
172806.01-12				NTS
DATE : 2020-07-17				
VISA MFOURNIER	PAGE : 1 DE 3			

172806.01-12

P4

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

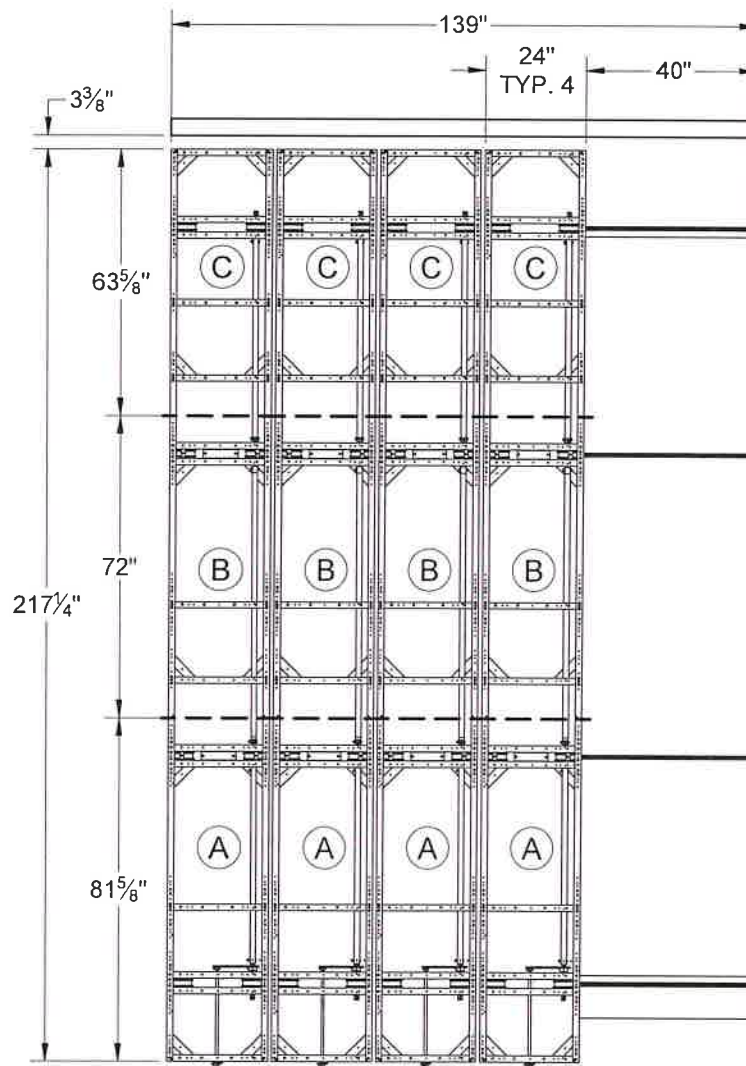

LEGEND:

- (A) MCSMES08163.240.01
- (B) MCSMEA07200.240.03
- (C) MCSMEE06363.240.01

CARRIAGES LAYOUT
BROOKLYN HOSPITAL
SYSTEMS B-J-P-R
LAYOUT DE CHARIOTS

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INIT.
NO PROJET CAD: CAD FILE NAME: 172806.01-.12	VU - SEEN	VERIF. - CHECK	ÉCHELLE - SCALE
DATE: 2020-07-17			NTS
VISA MFOURNIER	PAGE: 2 DE 3		

TOLÉRANCE GÉNÉRALE ± 1/16"



MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

GENERAL TOLERANCING ± 1/16"

PROJECTION




SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

172806.01-.12

P5

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

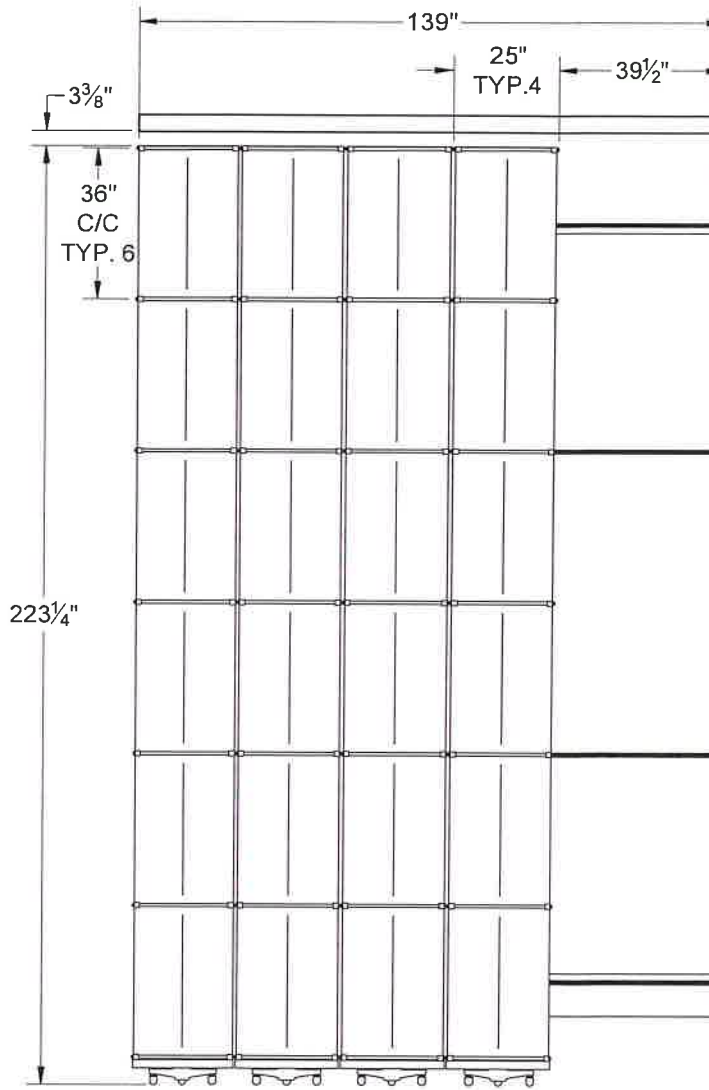

LEGEND

- SINGLE FACE SHELVING FIXED ON FLOOR
- FIXED SINGLE FACE SHELVING
- FIXED DOUBLE FACE SHELVING
- MOBILE SINGLE FACE SHELVING
- MOBILE DOUBLE FACE SHELVING
- DOUBLE FACE FULLBACK
- SWAY BRACE
- HANDLE (FOR MECHANICAL SYSTEM)

SHELVING LAYOUT BROOKLYN HOSPITAL SYSTEMS B-J-P-R LAYOUT D'ETAGERES

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXECUTION
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION

1	NOUVEAU		--	M.F.
ÉMISS.	MODIFICATION		DATE	INIT.
172806.01-.12	NO. REFERENCE	VU - SEEN	VERIF. - CHECK	ÉCHELLE - SCALE
DATE 2020-07-17				NTS
VISA MFOURNIER	PAGE : 3 DE 3			

TOLÉRANCE GÉNÉRALE $\pm 1/16"$

M MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace
WWW.MONTEL.COM

GENERAL TOLERANCING $\pm 1/16"$



PROJECTION
 1° ANGLE
 3° ANGLE

172806.01-.12


P6

This drawing contains proprietary and confidential information. duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.


** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

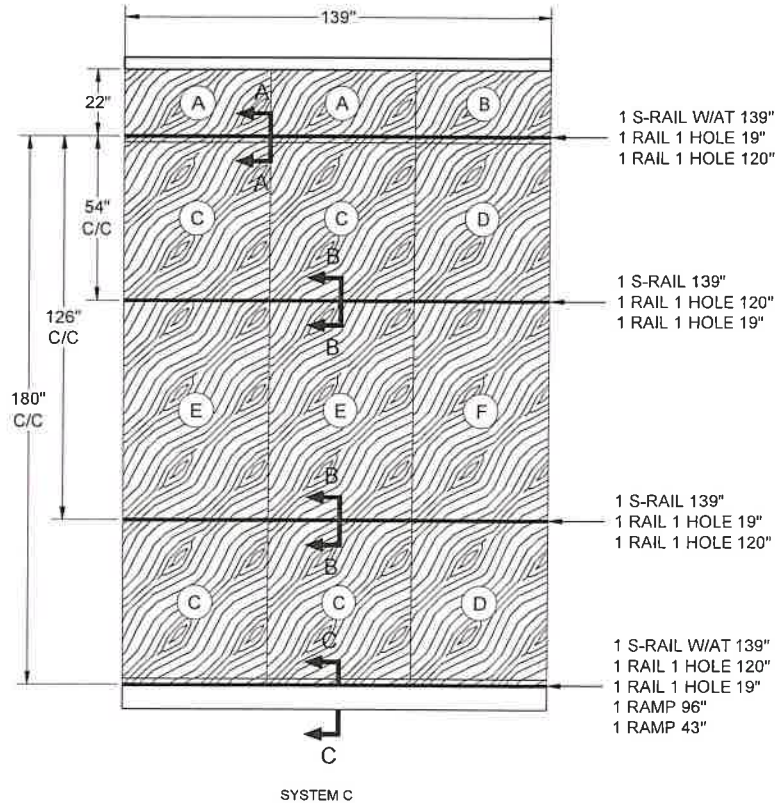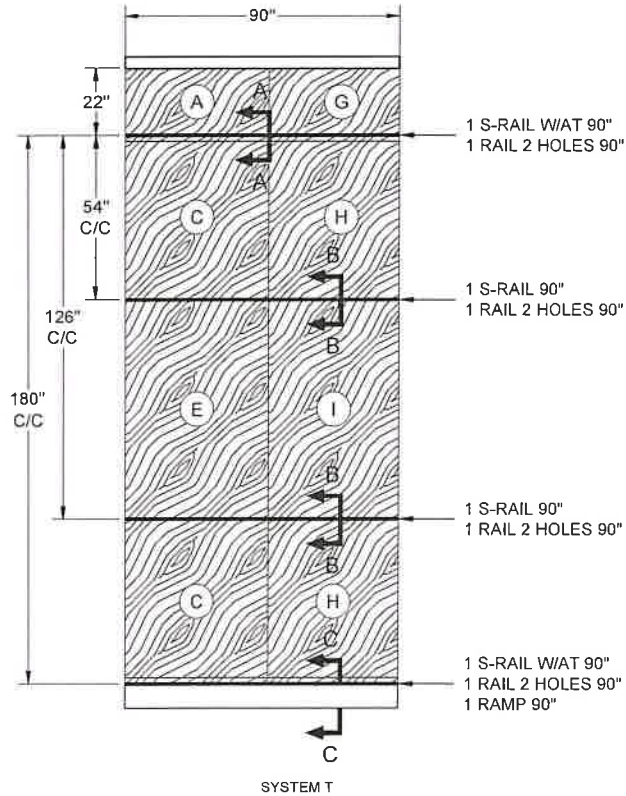


- 1 RAIL 1" X 3/4"
- 2 S-RAIL A/T
- 3 SHIM & GROUT
- 4 TAPCON SCREW 1/4" X 2 1/4"
- 5 TAPCON SCREW 1/4" X 1 1/4"
- 6 CONCRETE OR PLYWOOD
- 7 RAMP

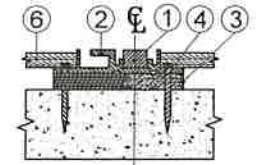

SECTION B-B
SCALE 1:8
ROTATED 90° C.W.

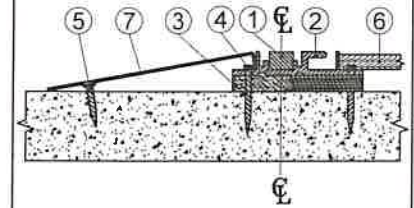

SECTION C-C
SCALE 1:8
ROTATED 90° C.W.

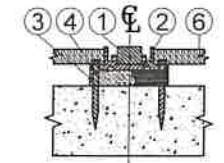

SECTION B-B
SCALE 1:8
ROTATED 90° C.W.


PLYWOOD TYPE "A" : 47 3/8" X 20 7/8"
PLYWOOD TYPE "B" : 44 1/4" X 20 7/8"
PLYWOOD TYPE "C" : 47 3/8" X 69 7/8"
PLYWOOD TYPE "D" : 44 1/4" X 69 7/8"
PLYWOOD TYPE "E" : 47 3/8" X 50 3/8"
PLYWOOD TYPE "F" : 44 1/4" X 50 3/8"
PLYWOOD TYPE "G" : 42 5/8" X 20 7/8"
PLYWOOD TYPE "H" : 42 5/8" X 50 3/8"
PLYWOOD TYPE "I" : 42 5/8" X 69 7/8"

LAYOUT DE RAILS
BROOKLYN HOSPITAL
SYSTEMS C-F-Q-S-T-U
RAILS LAYOUT

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU	---	M.F.
EMISS.	MODIFICATION	DATE	INIT.
NOTIFIER CAD. CAD FILE NAME 172806.01-.12	VU - SEEN	VERIF. - CHECK	ÉCHELLE - SCALE NTS
DATE : 2020-07-17			
VISA MFOURNIER	PAGE : 1 DE 3		

TOLÉRANCE GÉNÉRALE ± 1/16"
GENERAL TOLERANCING ± 1/16"
M MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace
WWW.MONTEL.COM




172806.01-.12

P7

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

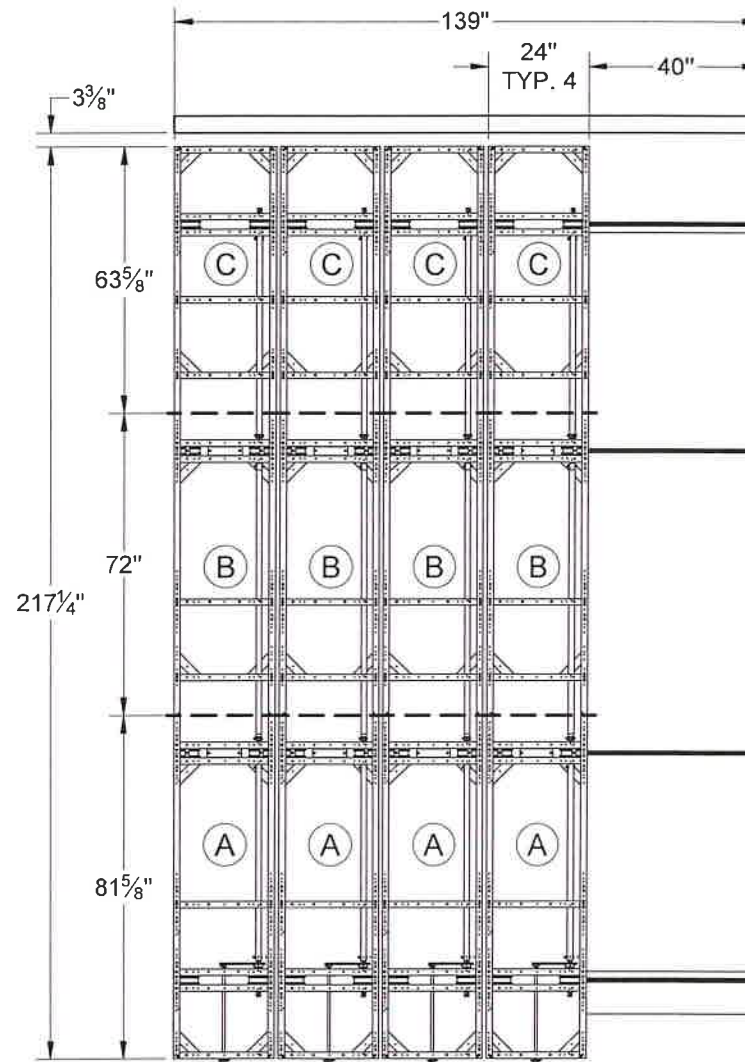

LEGEND:

- (A) MCSMES08163.240.01
- (B) MCSMEA07200.240.03
- (C) MCSMEE06363.240.01

CARRIAGES LAYOUT
BROOKLYN HOSPITAL
SYSTEMS C-F-Q-S-T-U
LAYOUT DE CHARIOTS


SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION

1	NOUVEAU		---	M.F.
ÉMISS.	MODIFICATION		DATE	INIT.
NO FICHIER CAD / CAD FILE NAME	NO REFERENCE	VU - SEEN	VERIF. - CHECK	
172806.01-.12			ÉCHELLE - SCALE	
DATE : 2020-07-17			NTS	
VISA MFOURNIER	PAGE : 2 DE 3			

TOLÉRANCE GÉNÉRALE ± 1/16"



GENERAL TOLERANCING ± 1/16"




172806.01-.12

P8

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

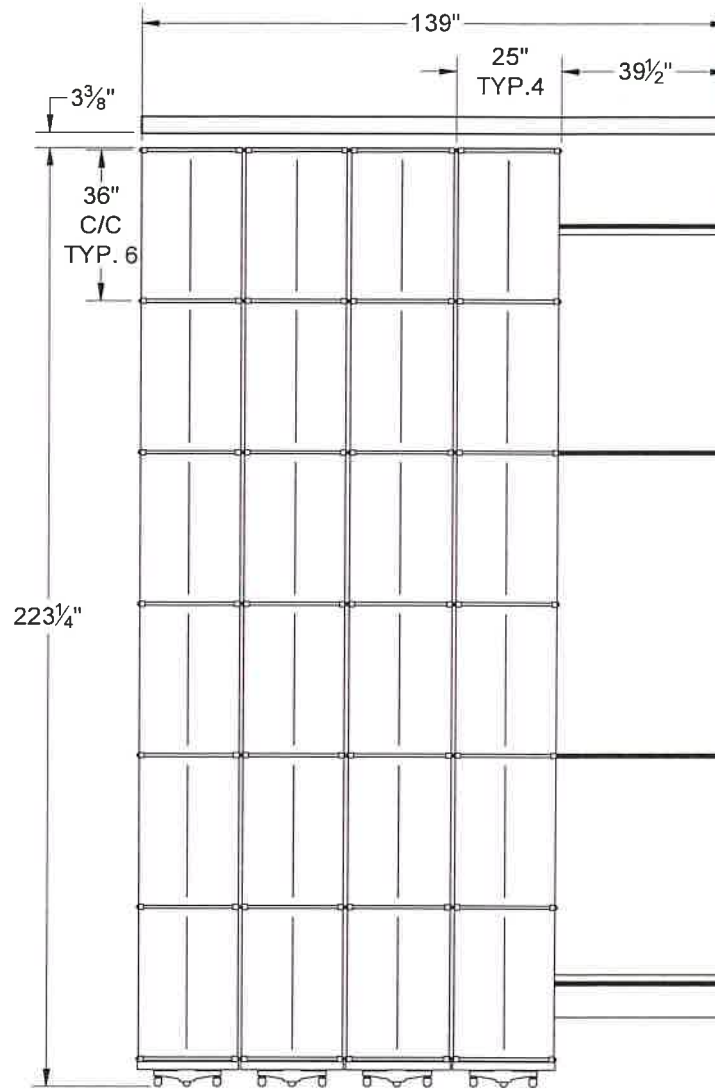

LEGEND

- SINGLE FACE SHELVING FIXED ON FLOOR
- FIXED SINGLE FACE SHELVING
- FIXED DOUBLE FACE SHELVING
- MOBILE SINGLE FACE SHELVING
- MOBILE DOUBLE FACE SHELVING
- DOUBLE FACE FULLBACK
- SWAY BRACE
- HANDLE (FOR MECHANICAL SYSTEM)

SHELVING LAYOUT BROOKLYN HOSPITAL SYSTEMS C-F-Q-S-T-U LAYOUT D'ETAGERES

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INT.
NO FICHER CAD / CAD FILE NAME 172806.01-.12	NO REFERENCE	VU - SEEN	VERIF. - CHECK
DATE 2020-07-17			
VISA MFOURNIER	PAGE : 3 DE 3		

ÉCHELLE - SCALE

NTS

TOLÉRANCE GÉNÉRALE ± 1/16"



MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

GENERAL TOLERANCING ± 1/16"

PROJECTION





172806.01-.12

P9


This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

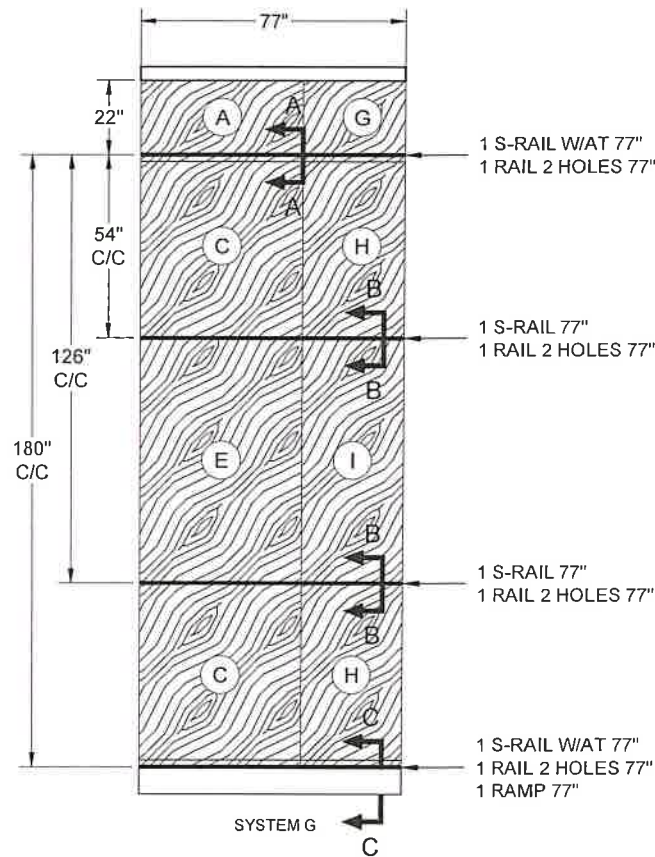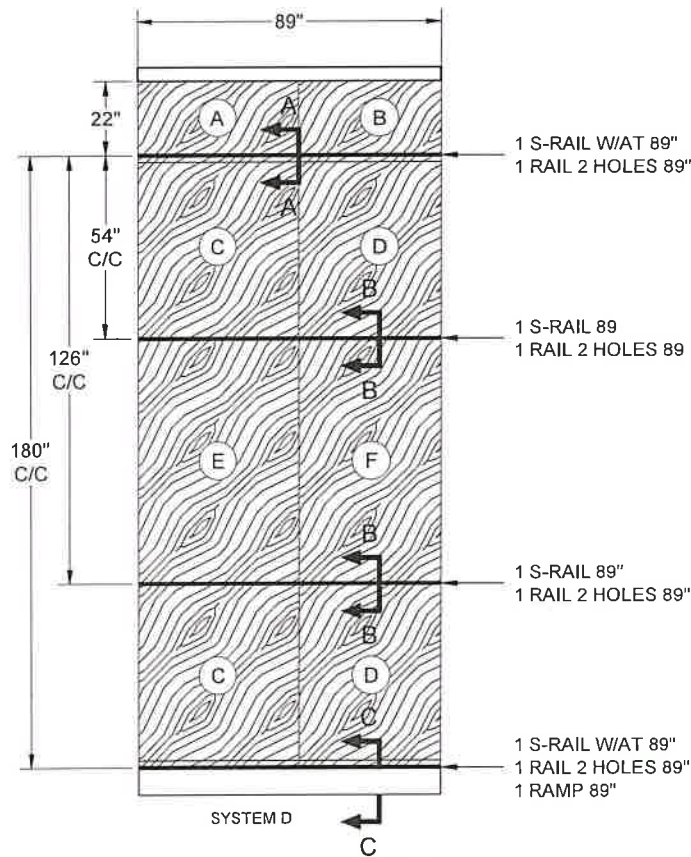


PLYWOOD TYPE "A" : 47 3/8" X 20 7/8"
PLYWOOD TYPE "B" : 41 5/8" X 20 7/8"
PLYWOOD TYPE "C" : 47 3/8" X 69 7/8"
PLYWOOD TYPE "D" : 41 5/8" X 69 7/8"
PLYWOOD TYPE "E" : 47 3/8" X 50 3/8"
PLYWOOD TYPE "F" : 41 5/8" X 50 3/8"
PLYWOOD TYPE "G" : 29 5/8" X 20 7/8"
PLYWOOD TYPE "H" : 29 5/8" X 50 3/8"
PLYWOOD TYPE "I" : 29 5/8" X 69 7/8"


- 1 RAIL 1" X 3/4"
- 2 S-RAIL A/T
- 3 SHIM & GROUT
- 4 TAPCON SCREW 1/4" X 2 1/4"
- 5 TAPCON SCREW 1/4" X 1 1/4"
- 6 CONCRETE OR PLYWOOD
- 7 RAMP

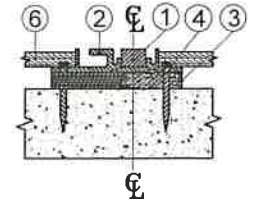

SECTION B-B
SCALE 1:8
ROTATED 90° C.W.

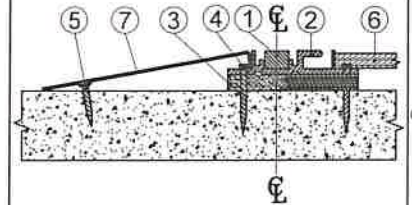

SECTION C-C
SCALE 1:8
ROTATED 90° C.W.

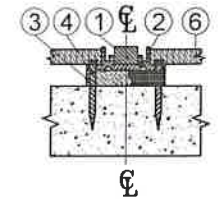

SECTION B-B
SCALE 1:8
ROTATED 90° C.W.

LAYOUT DE RAILS

BROOKLYN HOSPITAL
SYSTEMS D-G-H-I-M-N-O-V
RAILS LAYOUT

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INIT.
NO FICHE CAD / CAD FILE NAME	NO REFERENCE	ÉCHELLE - SCALE	
172806.01-.12		NTS	
DATE : 2020-07-17	VU - SEEN	VERIF. - CHECK	
VISA MFOURNIER	PAGE : 1 DE 3		

TOLÉRANCE GÉNÉRALE ± 1/16"




MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

GENERAL TOLERANCING ± 1/16"

PROJECTION




172806.01-.12

P10


This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

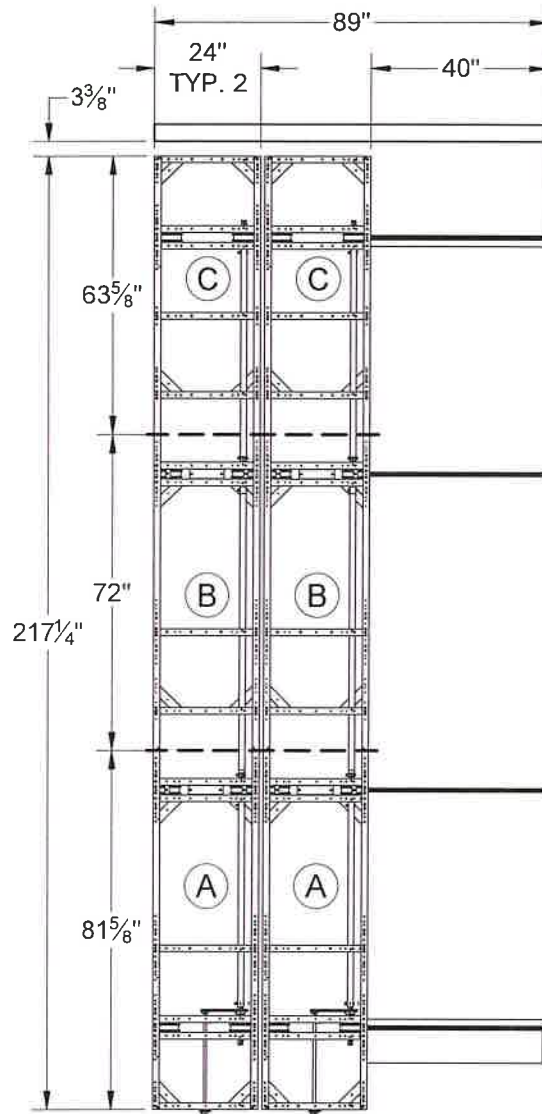

SYSTEM D

- LEGEND:**
- (A) MCSMES08163.240.01
 - (B) MCSMEA07200.240.03
 - (C) MCSMEE06363.240.01

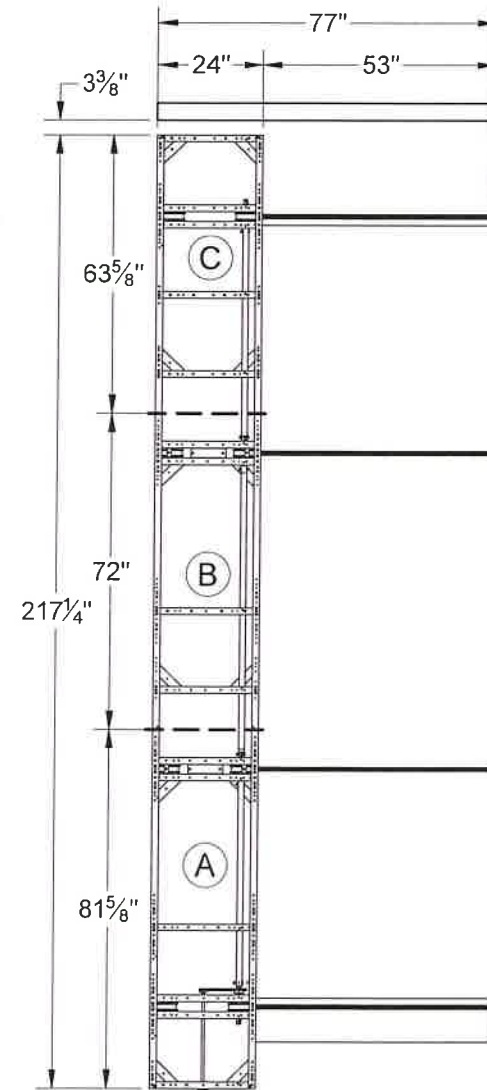

SYSTEM G

CARRIAGES LAYOUT
BROOKLYN HOSPITAL
SYSTEMS D-G-H-I-M-N-O-V
LAYOUT DE CHARIOTS


SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF ORDER ARE BINDING FOR THE EXECUTION.

1	NOUVEAU		---	M.F.
ÉMISS.	MODIFICATION		DATE	INIT.
NO FICHER CAD	CAD FILE NAME	NO REFERENCE	VU - SEEN	VERIF. - CHECK
172806.01-.12				
DATE 2020-07-17				
VISA MFOURNIER	PAGE : 2 DE 3			
ECHELLE - SCALE		NTS		

TOLERANCE GÉNÉRALE ± 1/16"



GENERAL TOLERANCING ± 1/16"




172806.01-.12


P11

This drawing contains proprietary and confidential information, duplication, reproduction or use of this document or its contents in any form other than as expressly permitted by Montel Inc. is strictly prohibited. Ce dessin contient des informations confidentielles, toutes reproductions ou utilisations de ce document pour un usage autre que celui permis par Montel Inc. est strictement interdit. Este dibujo contiene informaciones confidenciales, toda reproducción o utilización de este documento para un uso diferente de aquel permitido por Montel Inc. está estrictamente prohibida.

** Note that dimensions identified by the symbol "C/C" are center-to-center / Prendre note que les dimensions identifiées par "C/C" sont centre-centre **

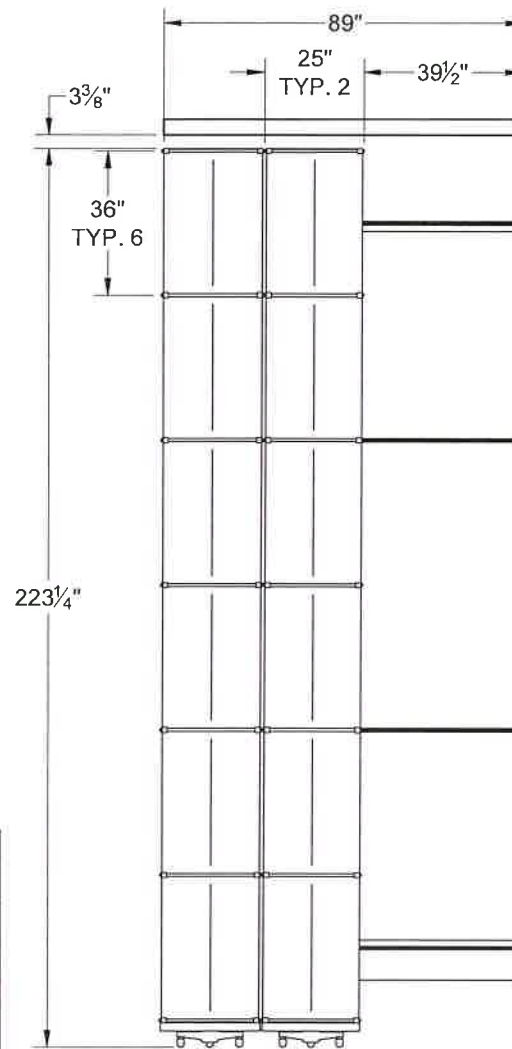

SYSTEM D

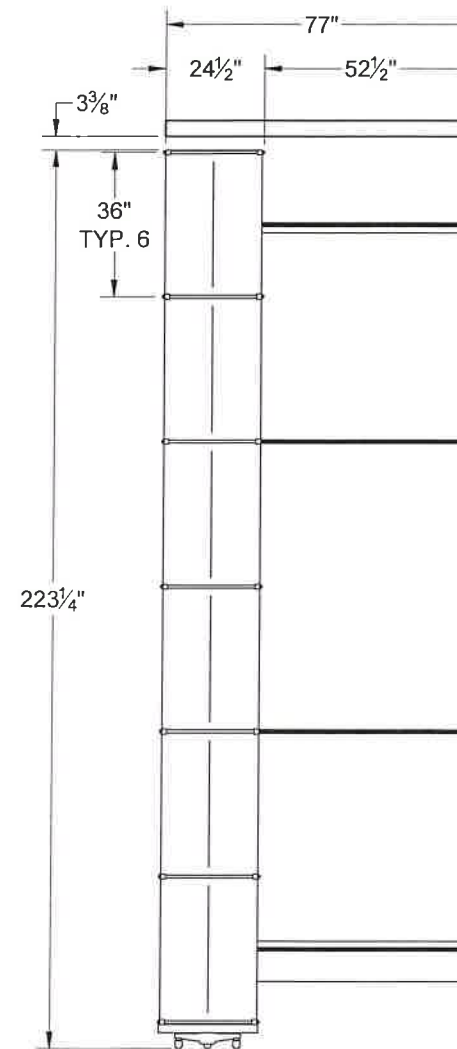

SYSTEM G

LEGEND

- SINGLE FACE SHELIVING FIXED ON FLOOR
- FIXED SINGLE FACE SHELIVING
- FIXED DOUBLE FACE SHELIVING
- MOBILE SINGLE FACE SHELIVING
- MOBILE DOUBLE FACE SHELIVING
- DOUBLE FACE FULLBACK
- SWAY BRACE
- HANDLE (FOR MECHANICAL SYSTEM)

SHELIVING LAYOUT
BROOKLYN HOSPITAL
SYSTEMS D-G-H-I-M-N-O-V
LAYOUT D'ETAGERES

SEUL LES DESSINS PORTANT LE NUMÉRO DE LA CONFIRMATION DE
COMMANDE NOUS ENGAGENT POUR L'EXÉCUTION.
ONLY DRAWINGS BEARING THE NUMBER OF THE ACKNOWLEDGEMENT OF
ORDER ARE BINDING FOR THE EXECUTION

1	NOUVEAU	---	M.F.
ÉMISS.	MODIFICATION	DATE	INIT.
NO FICHER CAD. CAD FILE NAME: 172806.01-.12	NG. REFERENCE:	VU - SEEN	VERIF. - CHECK
DATE 2020-07-17			
VISA MFOURNIER	PAGE : 3 DE 3		

ÉCHELLE - SCALE
NTS

TOLÉRANCE GÉNÉRALE ± 1/16"




MONTEL
The Intelligent Use of Space
Tout le potentiel de votre espace

WWW.MONTEL.COM

GENERAL TOLERANCING ± 1/16"

PROJECTION



172806.01-.12

P12